



ORIENTAMENTO E  
POSIZIONAMENTO  
TROMBA DI DAFUALT.  
DEFAULT HORN  
POSITIONING AND  
ORIENTATION.



SPEAKER TTL 4-A 90-240V

VISTA 3D / 3D VIEW

REV.  
A