




1 - Remove from the speaker
the RDNet blind panel

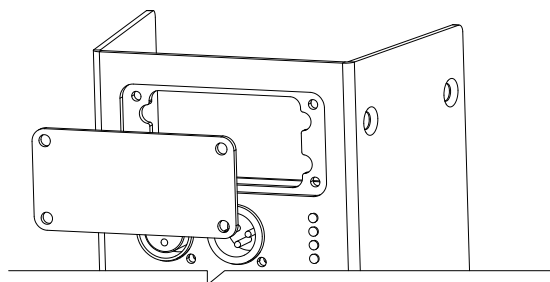

2 - Connect the flat cable that
you find inside the speaker
to the RDNet plug accessory

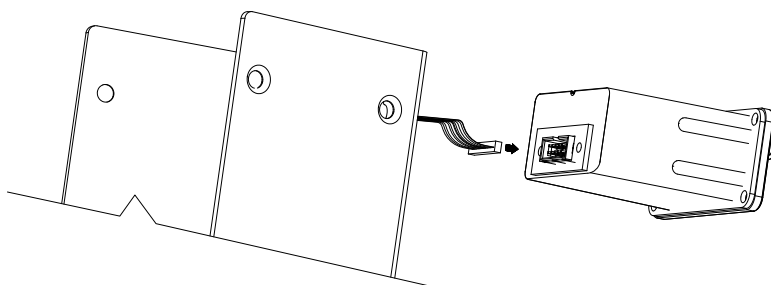

3 - The connector cover is assembled
to the RDNet plug accessory
to secure and seal the flat cable

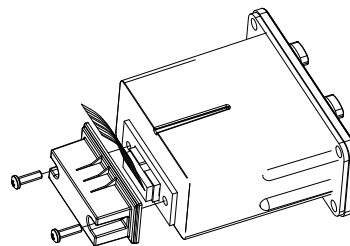

4 - Finally assemble the RDNet plug
to the speaker

